


# HORIZONTAL GLASSLESS MIRROR ASSEMBLY INSTRUCTIONS

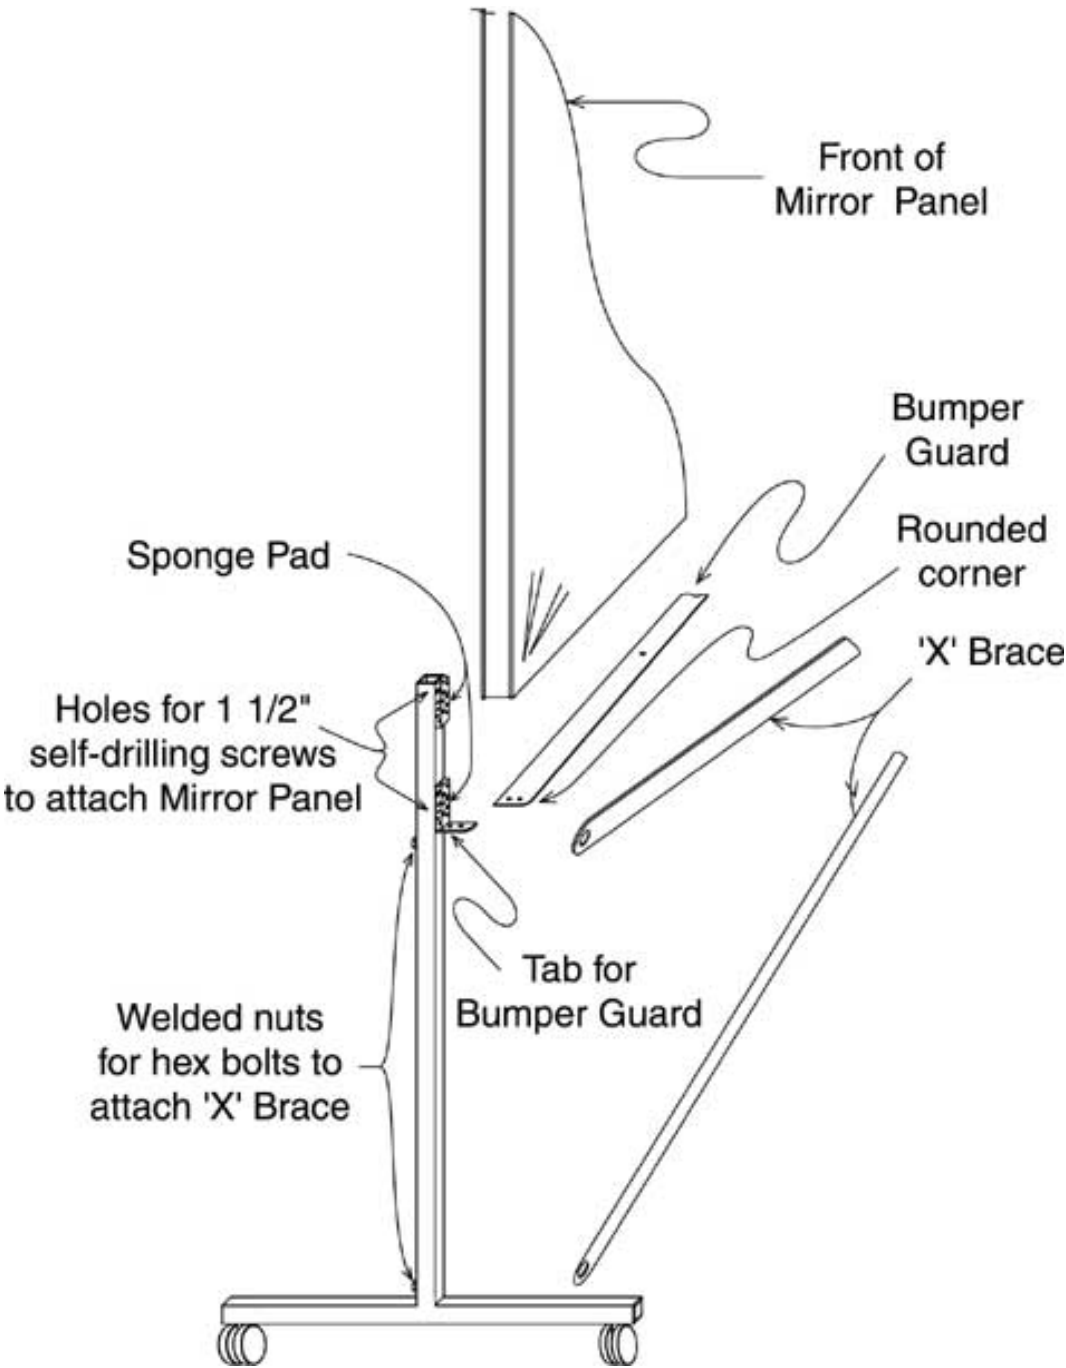

All Mirror Panels come with two pre-installed aluminum angle brackets for wall mounting. Remove these brackets if you are using the Alva's mirror base. Keep the clear plastic sheet over the mirror face to protect it while mounting the bases.

1. Open 'X' Brace and secure ends to nuts on 'T' Bars using the 4 Hex bolts provided. Put Hex Bolts in all the way but only finger tight to allow adjustment when attaching Bumper Guard.
2. Attach Bumper Guard to tabs in 'T' Bars using the 4 Countersink Bolts provided. Place rounded corner of Bumper Guard away from vertical square tube of 'T' Bar. Tighten these Countersink Bolts completely with a Phillips-head screwdriver.
3. Now tighten the 4 Hex Bolts with wrench.
4. Have a helper hold Mirror Panel centered on base. Side edges of mirror frame should be centered and flush with side vertical edges of the 'T' Bar. Drill drive four 1 1/2" Self-drilling Screws through the holes in vertical square tube of 'T' Bar and Mirror Panel's aluminum frame. Tighten screws up to the point where the sponge pads on 'T' Bar begin to slightly compress. Do not press excessively on mirror surface. Be careful not to over tighten screws to avoid stripping.
5. Plastic protective cover may now be removed from Mirror Panel.
6. Repeat process of drill driving three 3/4" Self-drilling Screws through the holes in bottom of Bumper Guard, securing the Bumper Guard to the bottom of Mirror Panel frame. Do not over-tighten screws.