



Perfect straightness is difficult to obtain in a natural product like wood.

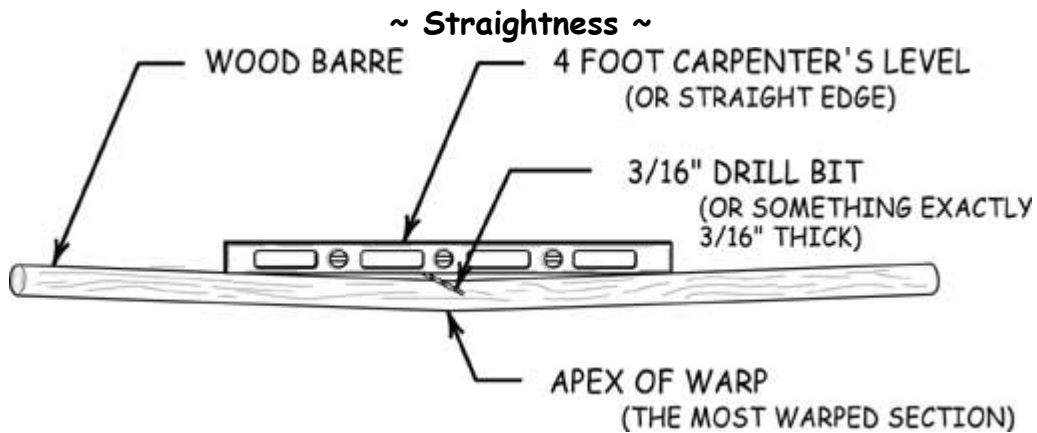

1. Sight down barre to determine apex of warp.
2. Center the level on apex and place 3/16" drill bit in gap.
3. If drill bit slides freely and completely through gap, the barre is beyond our warp tolerance.

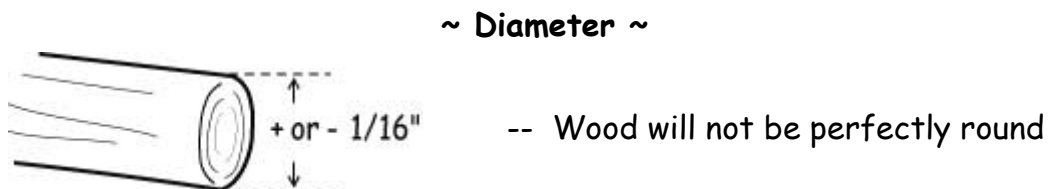

NOTICE: Customer has 5 days after date of delivery to call for replacement